

Installing Compression Connector SC-CN-30 Instructions

For SC-400 Cable


Parts list

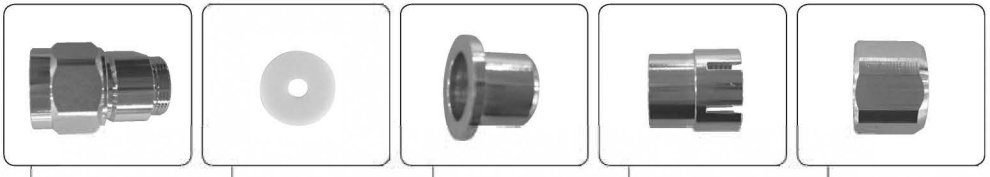


Tools list

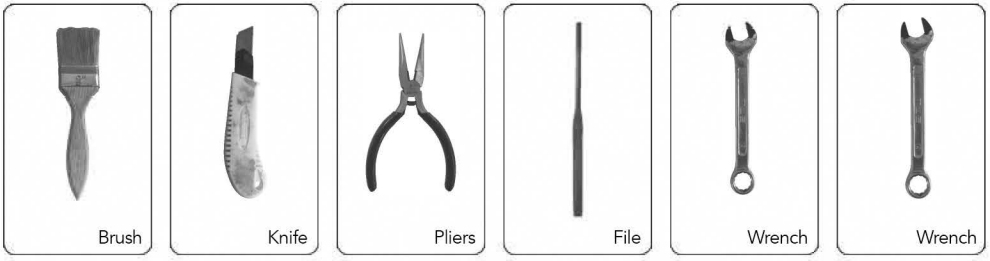


Assembly Steps

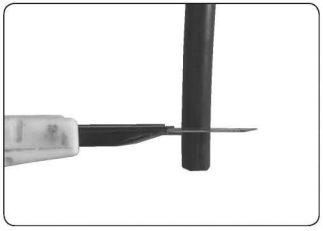


1. Cut jacket by knife by staled dimension and trim cable braid.

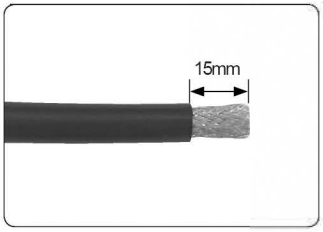

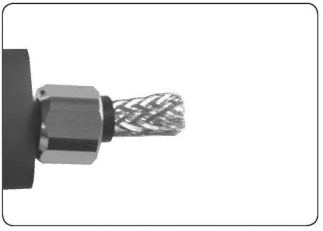

2. Slide the nut “5” onto the cable

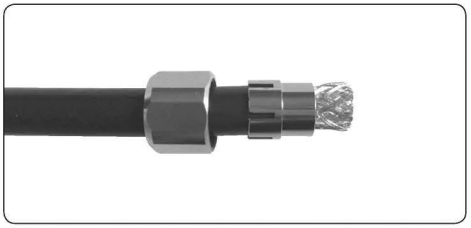


3. Slide ferrule “4” onto the cable, and push ferrule against the root of cable’s jacket.




4. Splay out outer conductor.

SureCall


Installing Compression Connector
SC-CN-30 Instructions

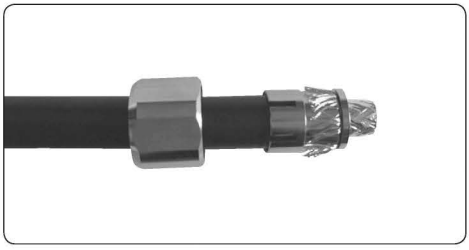


5. Slide lining '3' onto the cable.

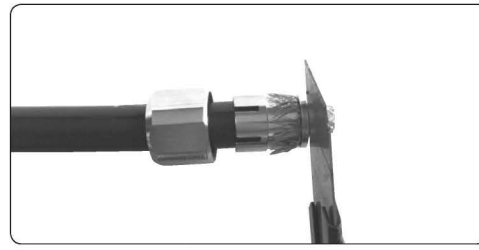

6. Carefully cut off the aluminum foil and dielectric along lining surface.

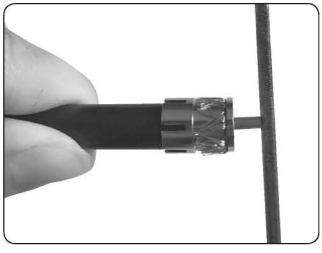

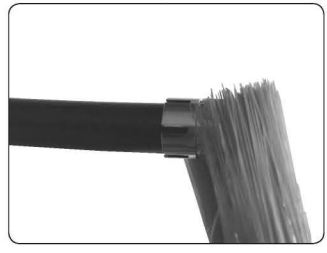


7. Taper inner conductor and remove debris with brush.



8. Push insulator "2" up to clamp, and press close to clamp.



9. Insert the prepared cable into the connector body: "1", then join the assembly parts for the connector body and the nut.

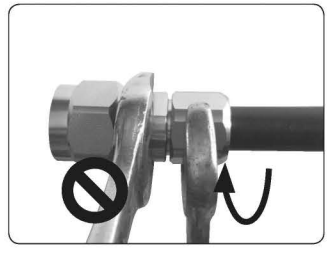

10. Tighten connector body firmly with the wrenches. (torture force is 5.0 N.m)



11. Finished assembly.

SureCall